



# Architectural Stone Concepts Installation Guide

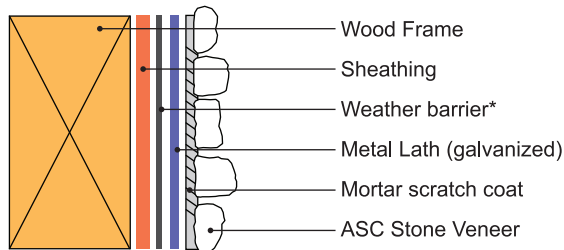

\*Always check local building codes

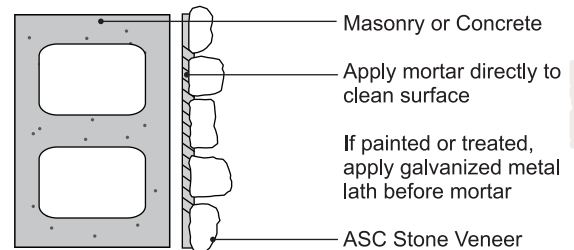

Masonry Sealer is not necessary but may be applied to surface in area's prone to splashing water, dirt, soot or smoke

## 1) Surface Preparation

Attach weather resistive barrier to the sheathing surface.

Apply metal lath over the weather resistive barrier.

Apply one half inch scratch coat of type N or S mortar cement over the metal lath.

## 2) Stone Installation

First Install the corner pieces, then the flat pieces.

Dampen with a brush or light spray the back of each stone piece and the scratch coat.

Apply 1/2" to 3/4" thick mortar to prepared surface or alternately back of stone.


Place stone into place on surface.

## 3) Grout Application

Use grout bag to fill in joints. (There should be no visible lath after grouting)

When joints become firm, or "thumb-print" dry, press mortar into joints.

When mortar dries, whisk or brush away loose mortar.

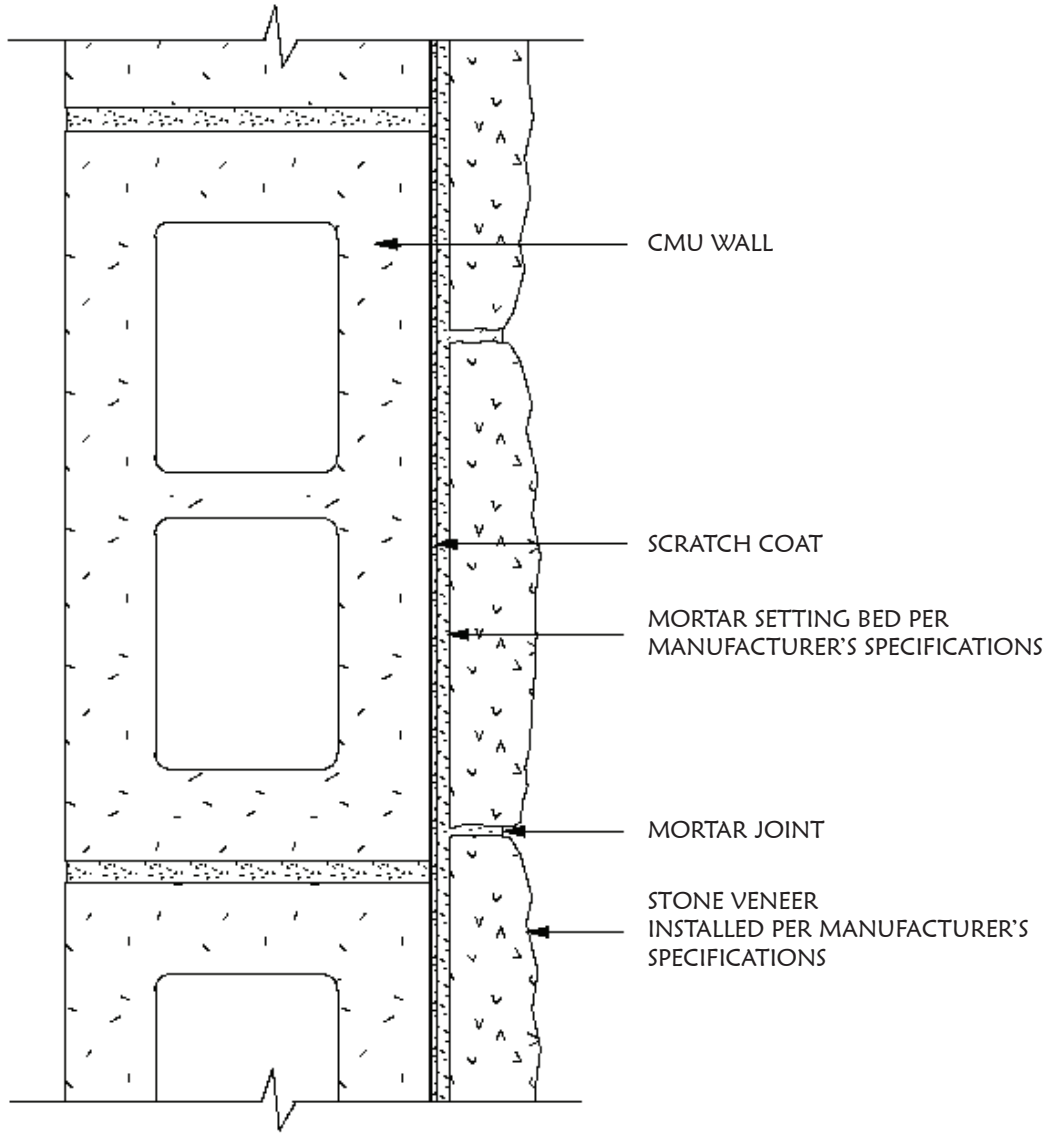


## PLAN VIEW

Phone: 480.391.7799  
 Fax: 480.391.7776  
[www.GotStoneUSA.com](http://www.GotStoneUSA.com)

MANUFACTURED STONE VENEER  
 ON C.M.U. WALL

**A** RCHITECTURAL  
**S** Stone Concepts

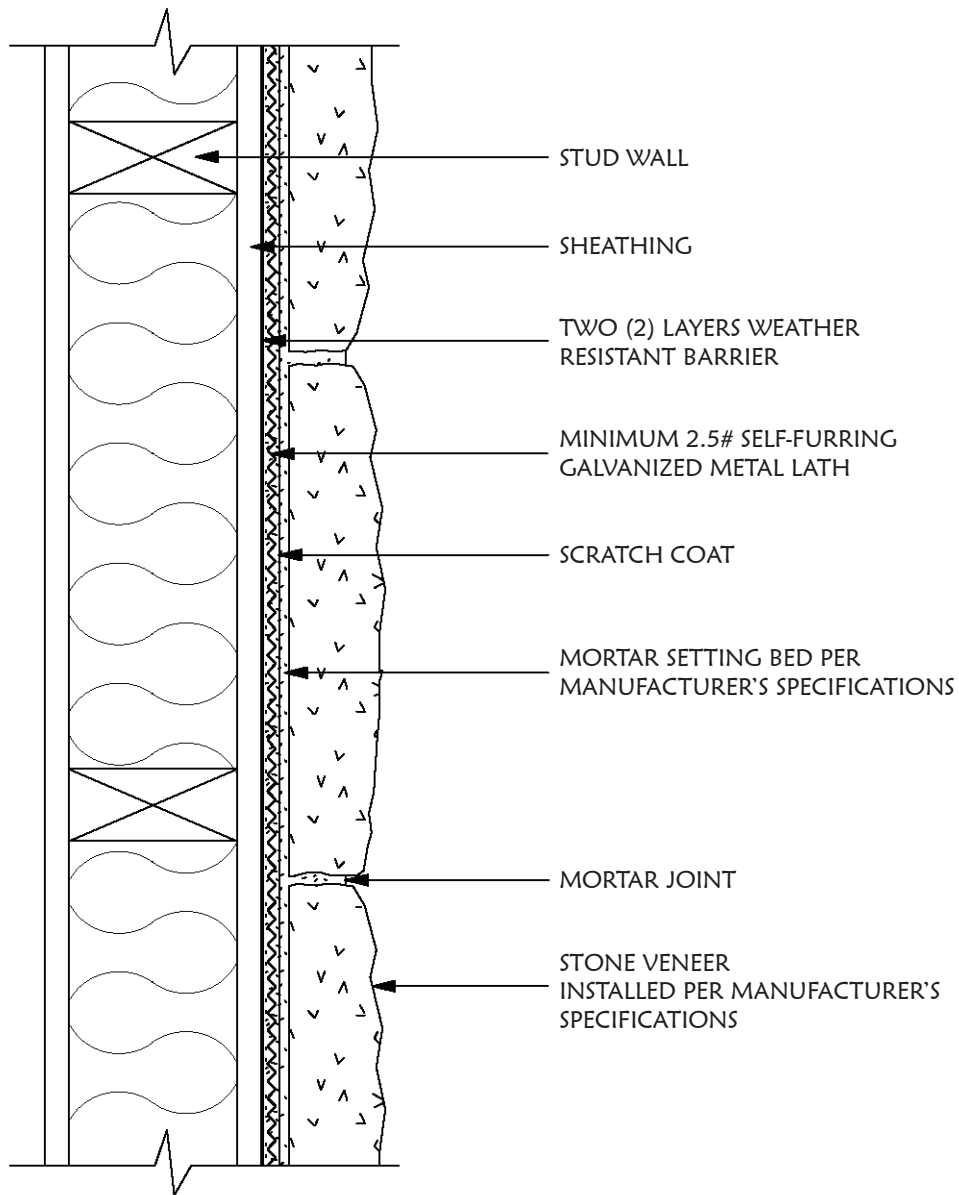


## PLAN VIEW

Phone: 480.391.7799  
 Fax: 480.391.7776  
[www.GotStoneUSA.com](http://www.GotStoneUSA.com)

MANUFACTURED STONE VENEER  
 ON STUD WALL

**ARCHITECTURAL**  
**Stone Concepts**

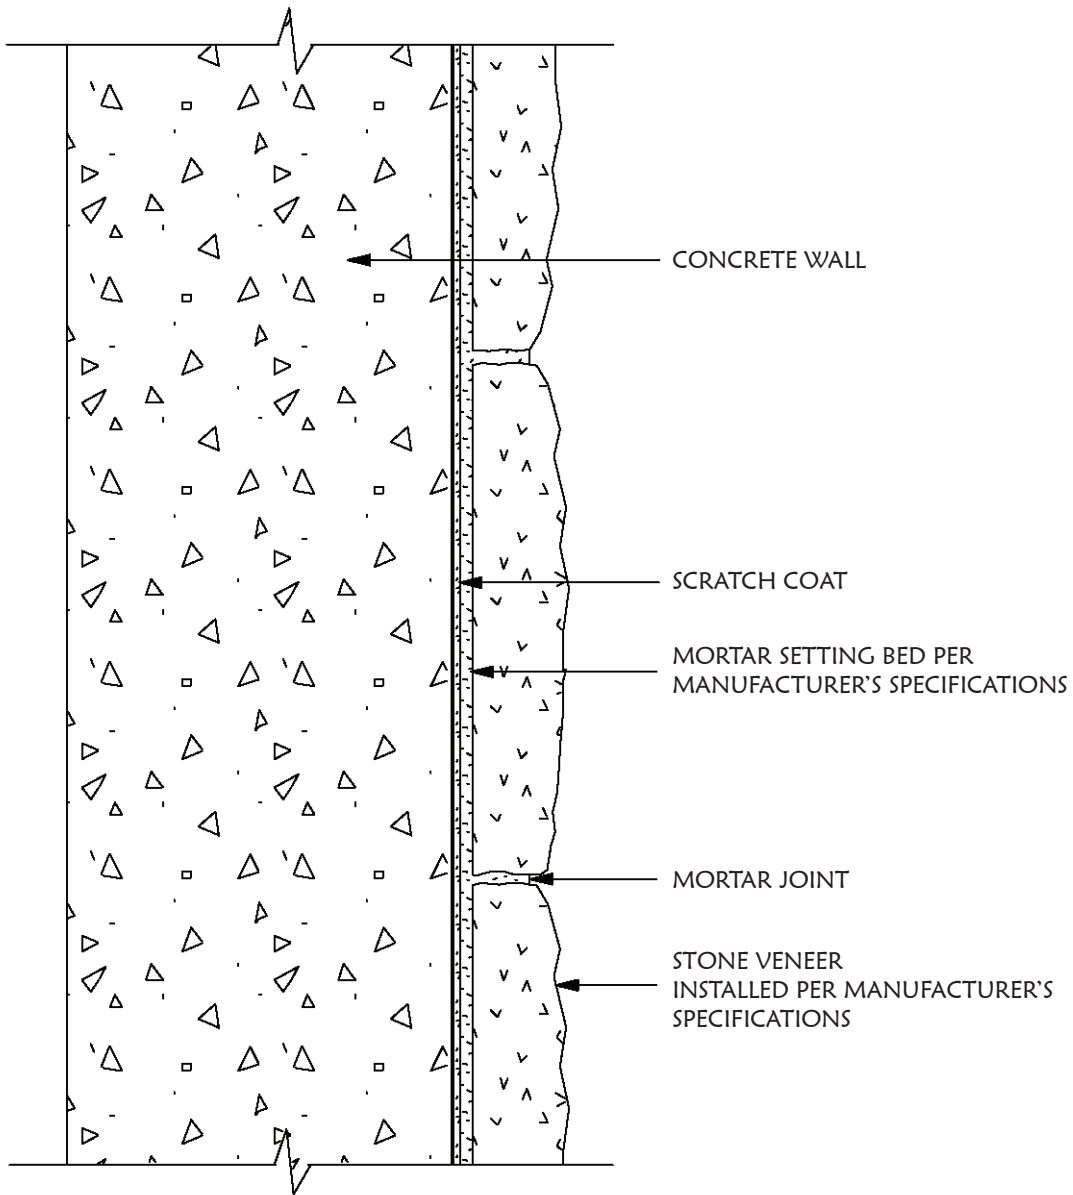


NOTE: CONCRETE MUST BE CLEAN AND FREE FROM DIRT AND OTHER FOREIGN MATERIAL BEFORE STONE INSTALLATION

## PLAN VIEW

Phone: 480.391.7799  
 Fax: 480.391.7776  
[www.GotStoneUSA.com](http://www.GotStoneUSA.com)

MANUFACTURED STONE VENEER  
 ON CONCRETE WALL

**A** RCHITECTURAL  
**S** Stone Concepts

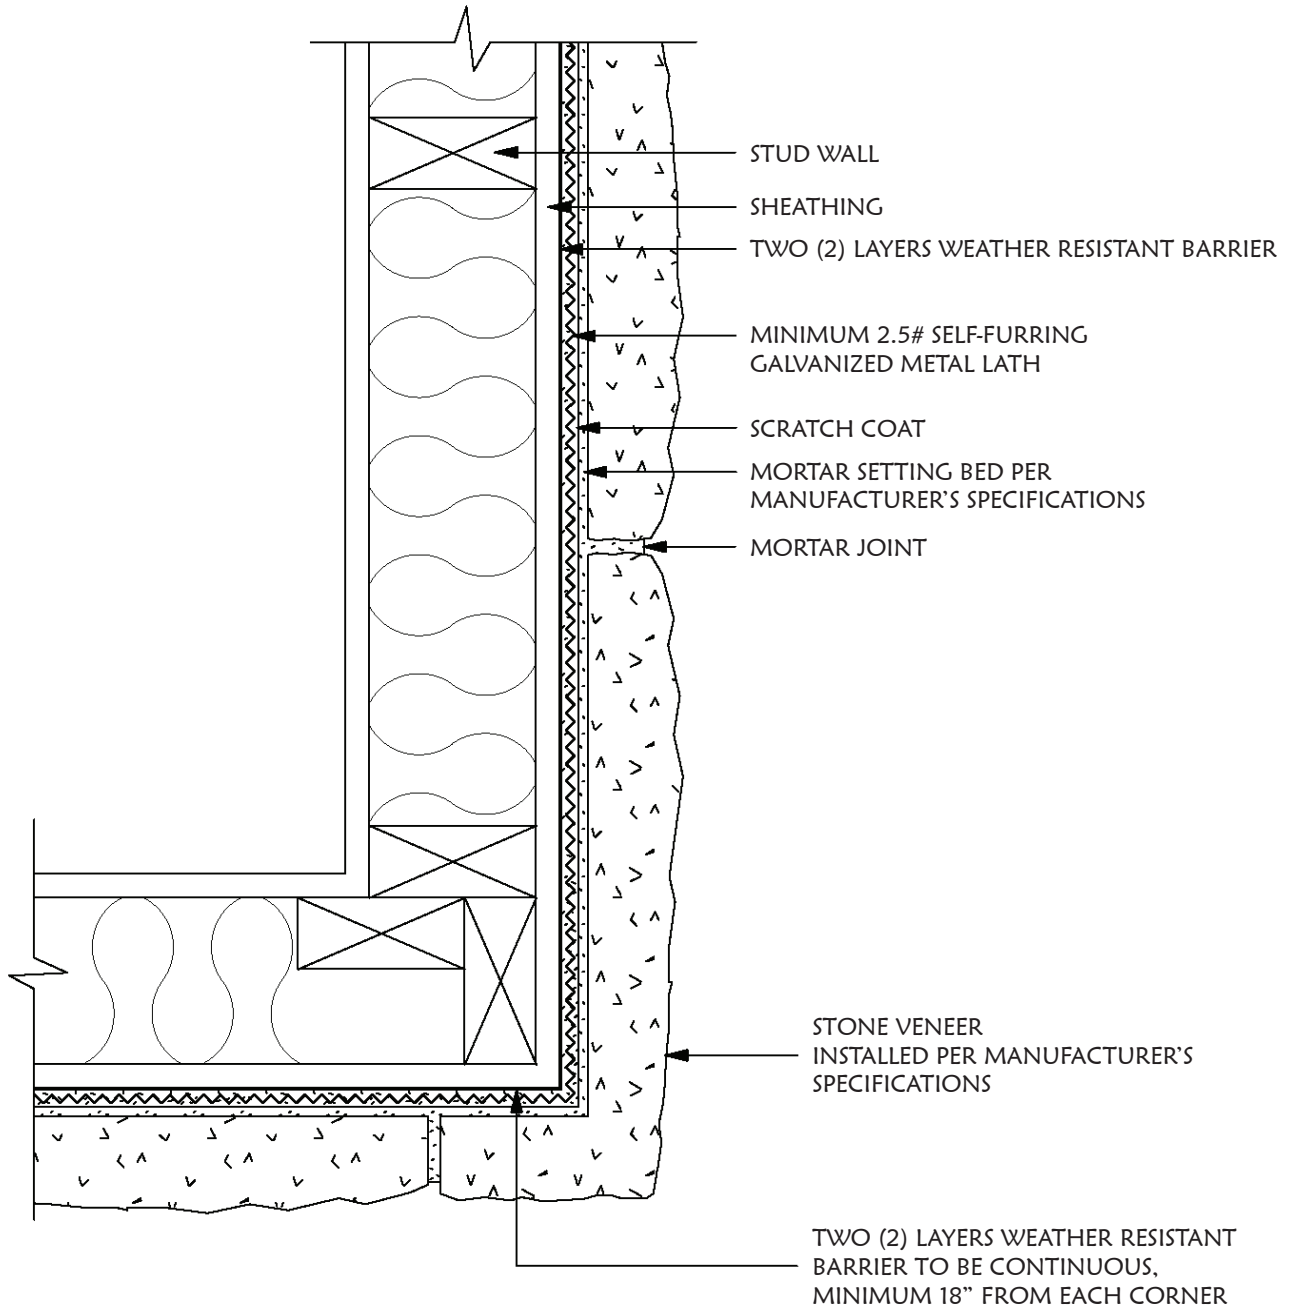


## PLAN VIEW

Phone: 480.391.7799  
 Fax: 480.391.7776  
[www.GotStoneUSA.com](http://www.GotStoneUSA.com)

MANUFACTURED STONE VENEER  
 ON STUD WALL  
 OUTSIDE CORNER INSTALLATION

**ARCHITECTURAL**  
**Stone Concepts**

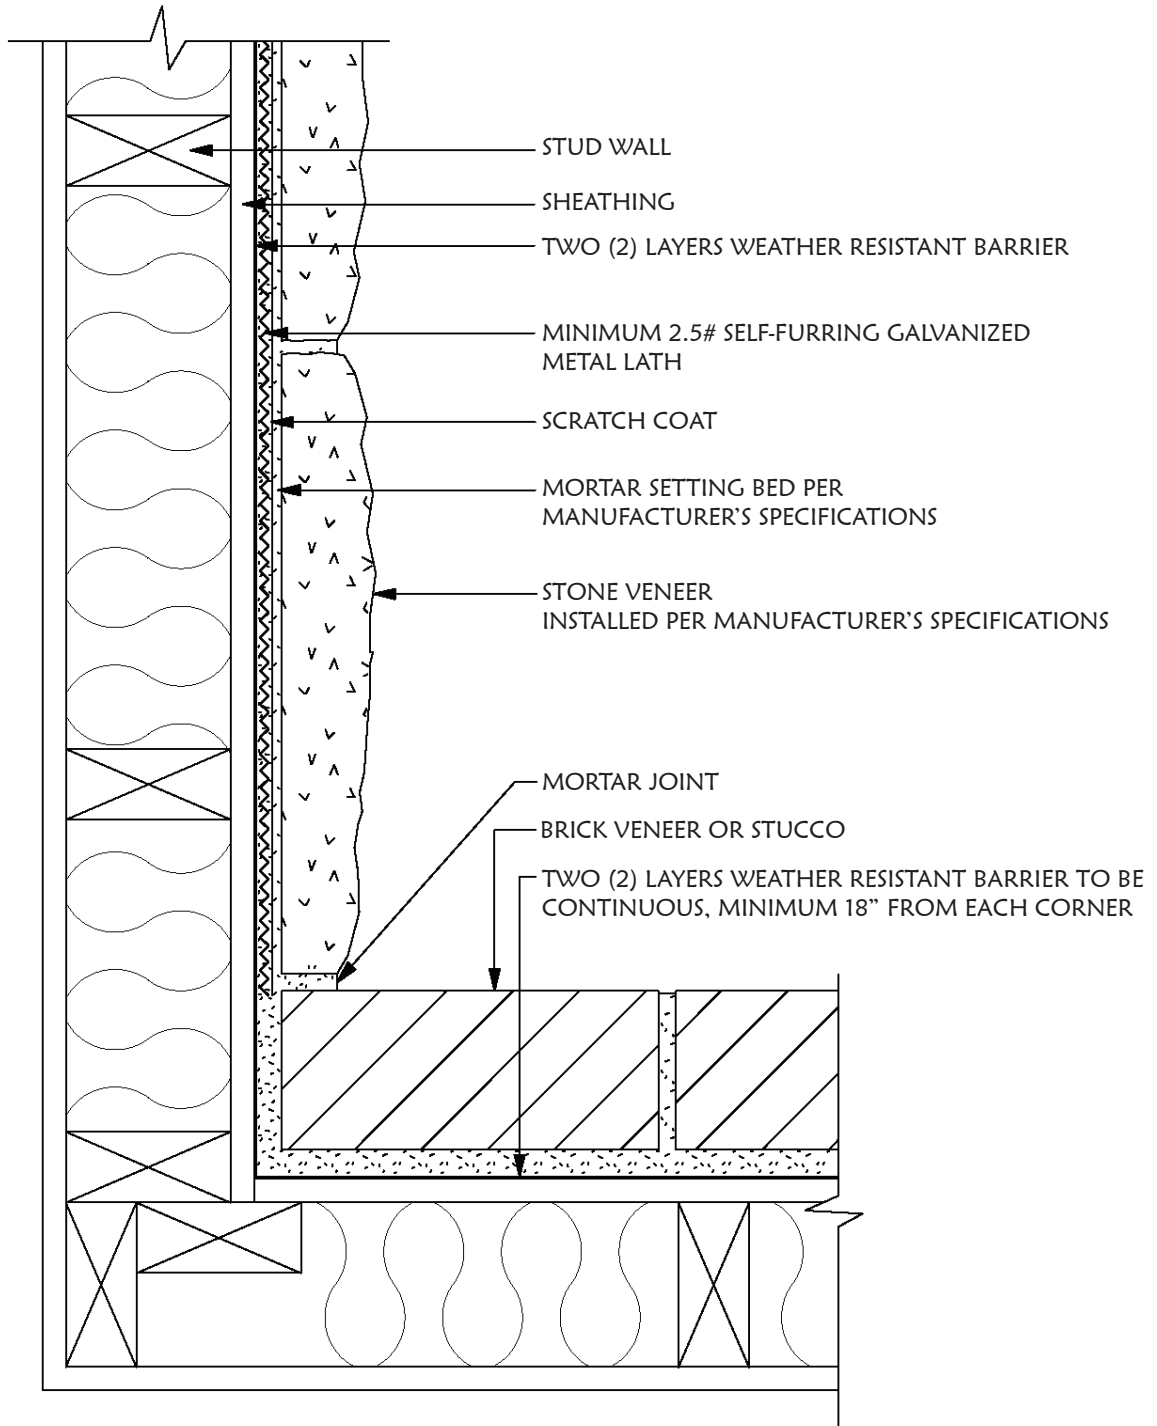

**PLAN VIEW**

Phone: 480.391.7799  
 Fax: 480.391.7776  
[www.GotStoneUSA.com](http://www.GotStoneUSA.com)

MANUFACTURED STONE VENEER  
 ON STUD WALL  
 INSIDE CORNER TRANSITION

